

Description of communication line connection



The first step

All the interfaces on the right side of the 6# battery box CANBUS have been connected to the communication line. Please do not unplug or move the position



The second step

The CANBUS interface on the left side of # 6 battery box is connected with the CANBUS interface on the right side of # 5 battery box





The third step

The CANBUS interface on the left side of # 5 battery box is connected with the CANBUS interface on the right side of # 4 battery box



The fourth step

The CANBUS interface on the left side of # 4 battery box is connected with the CANBUS interface on the right side of # 3 battery box





The fifth step

The CANBUS interface on the left side of # 3 battery box is connected with the CANBUS interface on the right side of # 2 battery box



The sixth step

The CANBUS interface on the left side of # 3 battery box is connected with the CANBUS interface on the right side of # 2 battery box

No. 1 battery box is the main engine, and the left CANBUS interface is connected with the rectifier